



ASSEMBLY INSTRUCTIONS

**EASTBOURNE
ELECTRIC RECLINER
ARMCHAIR**



 
Eastbourne Power Motion Chair

Please follow these instructions carefully in order to ensure your new sofa is assembled in the correct manner.

Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.


Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1

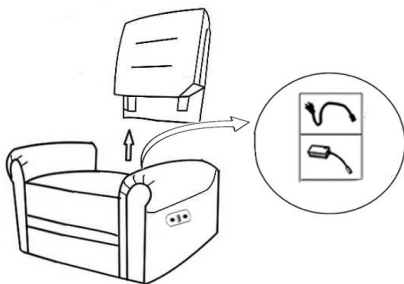


Remove the sofa back main cushion and transformer from the sofa.

 STEP 2

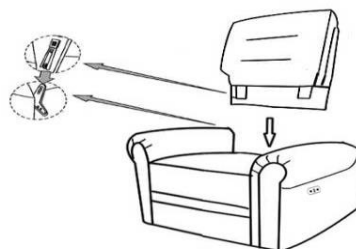

When fitting the back sections ensure the connecting clips are aligned and then (with a person at each end) lower the back section into the base applying firm pressure until you hear a "click" and the back is secure.

 STEP 3

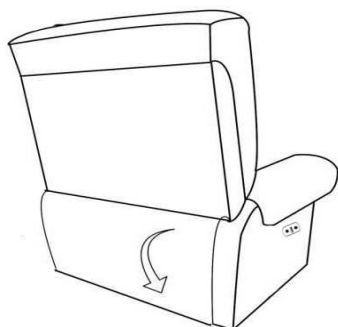


Attach the fabric cover at the back, to the velcro strip to secure.

STEP 4




Connect the cable from the sofa, into the transformer and plug into a standard mains socket.

 STEP 5

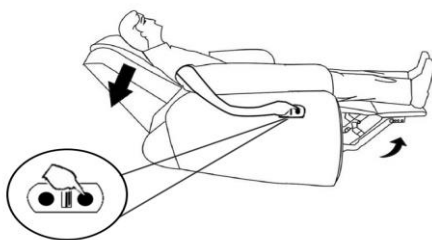


Press the front button to recline your furniture.

 STEP 6

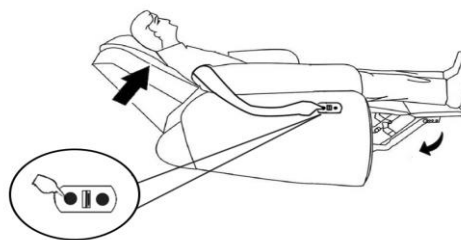

 Press the back button to return to the upright position.

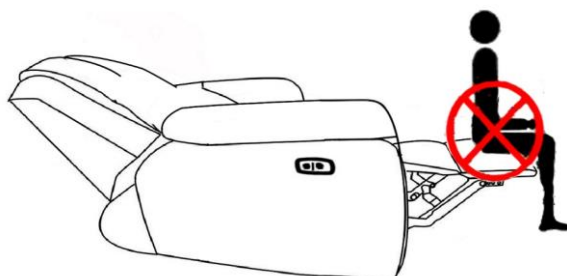


Please do not sit on the foot rest!

*Failure to correctly assemble your furniture may affect your warranty



ASSEMBLY INSTRUCTIONS

 **EASTBOURNE
ELECTRIC RISER RECLINER
ARMCHAIR**

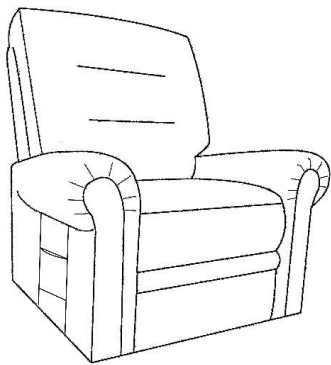


Please follow these instructions carefully in order to ensure your new sofa is assembled in the correct manner.

Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.

Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.


Eastbourne Power Motion Chair

 STEP 1

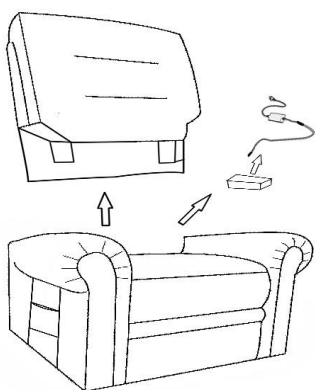


Remove the back and transformer from the sofa.

 STEP 2

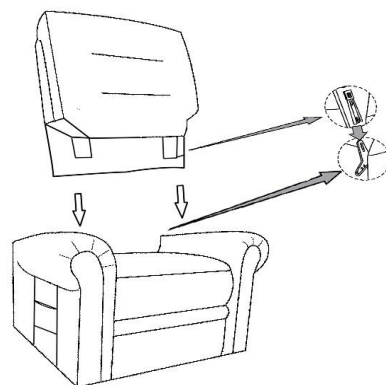


When fitting the chair back ensure the connecting clips are aligned and then (with a person at each end) lower the back section into the base applying firm pressure until you hear a "click" and the back is secure.

 STEP 3

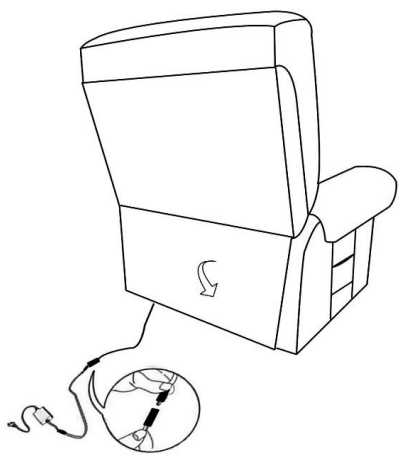


Connect the cable from the chair to the transformer and attach the cover at the back.

 STEP 4

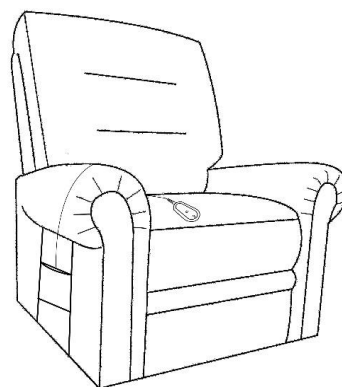


Your chair is now ready to operate.

 STEP 5

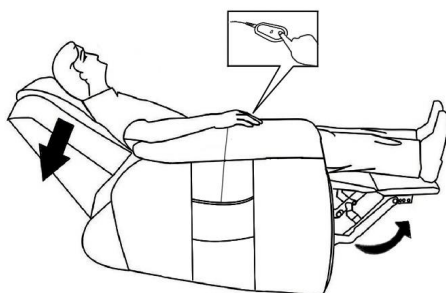

Press the rear button to recline your furniture.

 STEP 6

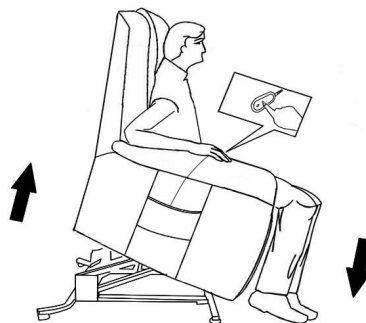

Press the front button to return to the upright position and also raise the armchair, please take care when raising to this position.



ASSEMBLY INSTRUCTIONS

**EASTBOURNE
2 SEATER ELECTRIC
RECLINER SOFA**



 
Eastbourne Medium Sofa

Please follow these instructions carefully in order to ensure your new sofa is assembled in the correct manner.

Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.


Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1

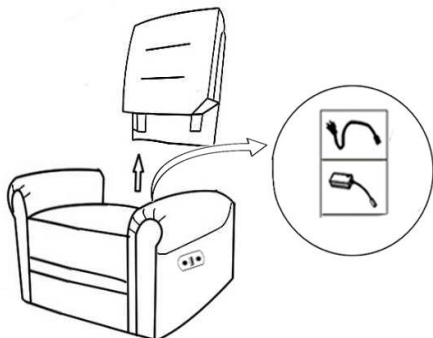


Remove the sofa back main cushions (x2) and transformer from the sofa.

 STEP 2

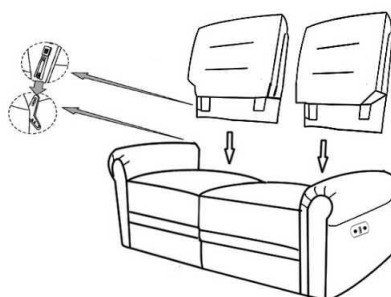


When fitting the back sections ensure the connecting clips are aligned and then (with a person at each end) lower the back section into the base applying firm pressure until you hear a "click" and the back is secure.

 STEP 3

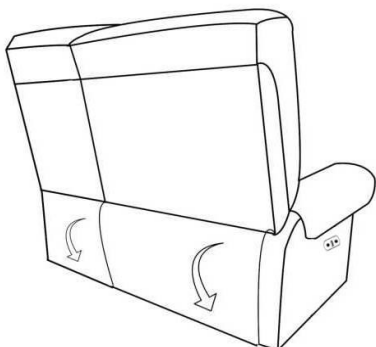


Attach the fabric cover at the back, to the velcro strip to secure.

 STEP 4

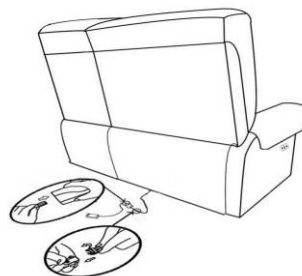


Connect the cable from the sofa, into the transformer and plug into a standard mains socket.

 STEP 5

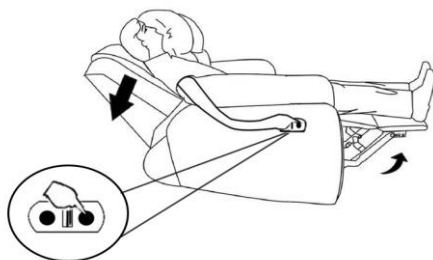

Press the front button to recline your furniture.

 STEP 6

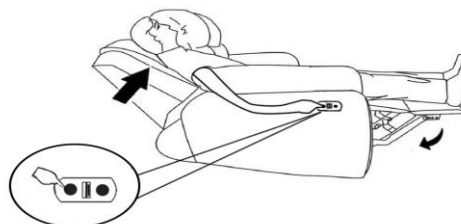

Press the back button to return to the upright position.



 
Please do not sit on the foot rest!

*Failure to correctly assemble your furniture may affect your warranty



ASSEMBLY INSTRUCTIONS

**EASTBOURNE
3 SEATER ELECTRIC
RECLINER SOFA**

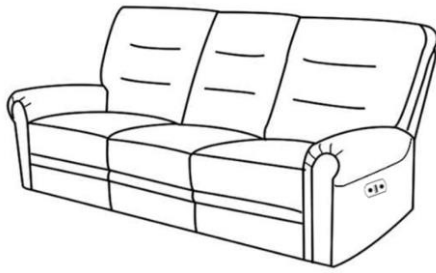


Eastbourne Large Sofa

Please follow these instructions carefully in order to ensure your new sofa is assembled in the correct manner.

Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.


Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

 STEP 1

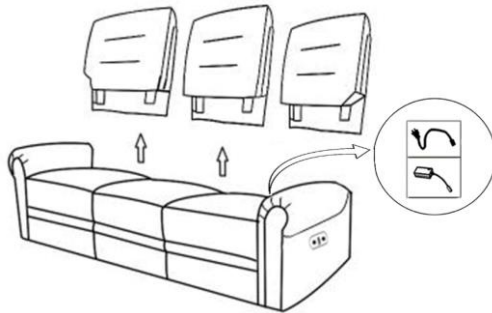


Remove the sofa back main cushions (x3) and transformer from the sofa.

 STEP 2

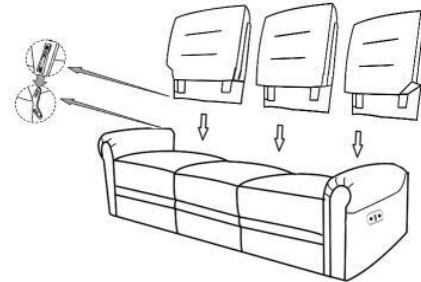

When fitting the back sections ensure the connecting clips are aligned and then (with a person at each end) lower the back section into the base applying firm pressure until you hear a "click" and the back is secure.

 STEP 3

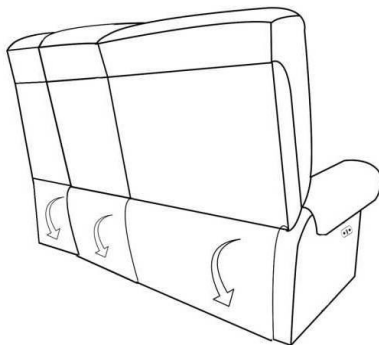


Attach the fabric cover at the back, to the velcro strip to secure.

STEP 4




Connect the cable from the sofa, into the transformer and plug into a standard mains socket.

 STEP 5

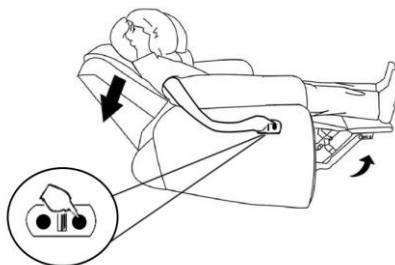


Press the front button to recline your furniture.

 STEP 6

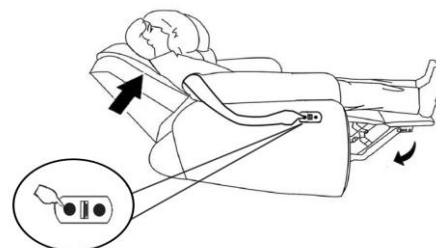

 Press the back button to return to the upright position.

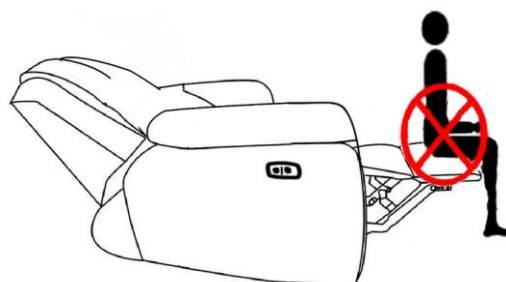

Please do not sit on the foot rest!

*Failure to correctly assemble your furniture may affect your warranty