



ASSEMBLY INSTRUCTIONS

**FINLEY
ELECTRIC RECLINER
ARMCHAIR**



 
Finley Power Motion Chair

Please follow these instructions carefully in order to ensure your new sofa is assembled in the correct manner.

Please do not use a sharp implement when unpacking your furniture as this may damage the leather.


Please note that any creases in the leather are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1

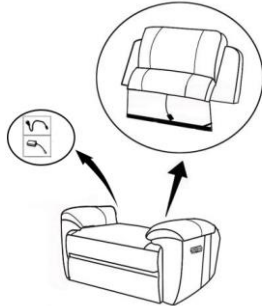


Remove the chair back main cushion (x1) and transformer from the sofa.

 STEP 2

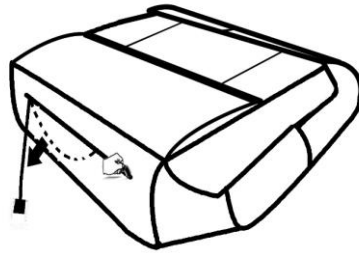


Pull the cable through the back of the chair as shown above.

 STEP 3

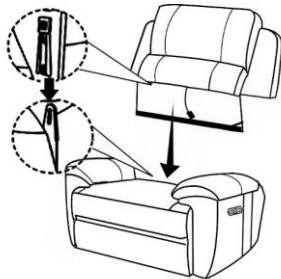


When fitting the chair back ensure the connecting clips are aligned and then (with a person at each end) lower the back section into the base applying firm pressure until you hear a "click" and the back is secure.

 STEP 4

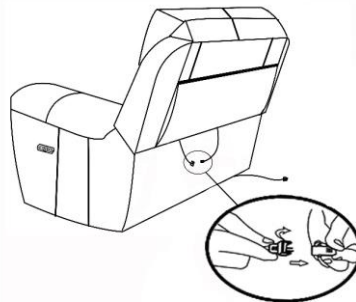


Connect both leads labelled 'headrest' together securing with attached clip.

 STEP 5

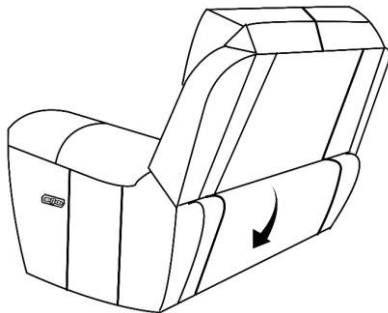


Attach the leather cover at the back to the velcro strip to secure.

 STEP 6

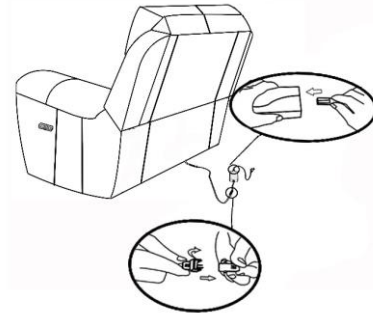


Connect the cable from the chair into the transformer provided and plug into a standard mains socket.

 STEP 7

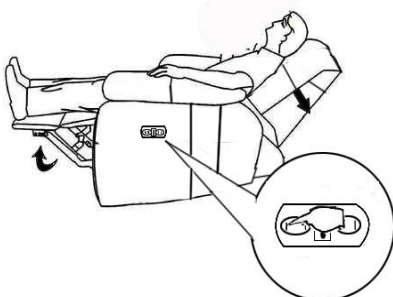


Press the front of the first button to recline your furniture.

 STEP 8

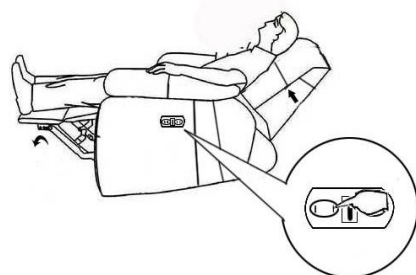


Press the rear of the first button to return to the upright position.

 STEP 9

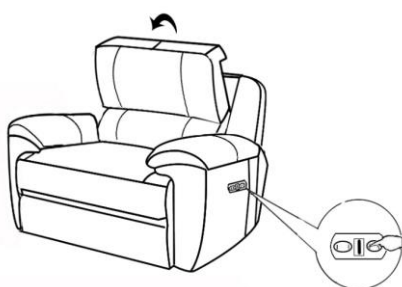

Press the front of the second button to press the headrest forward.

 STEP 10

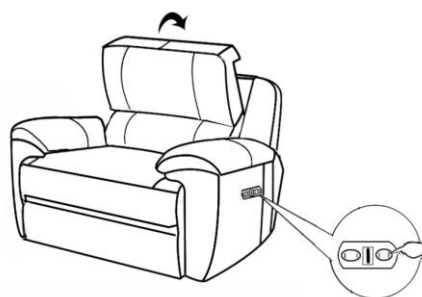

Press the rear of the second button to return the headrest to the upright position.



 
Please do not sit on the foot rest!

*Failure to correctly assemble your furniture may affect your warranty



ASSEMBLY INSTRUCTIONS

**FINLEY
2 SEATER ELECTRIC
RECLINER SOFA**

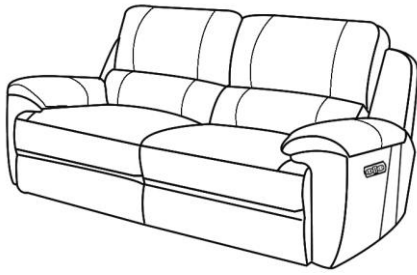


Finley Power Motion Sofa

Please follow these instructions carefully in order to ensure your new sofa is assembled in the correct manner.

Please do not use a sharp implement when unpacking your furniture as this may damage the leather.


Please note that any creases in the leather are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

 STEP 1

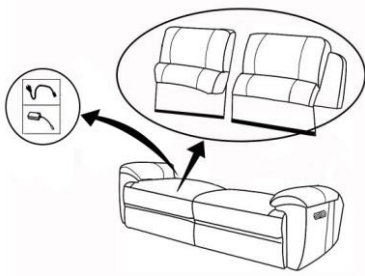


Remove the sofa back main cushions (x2) and transformer from the sofa.

 STEP 2

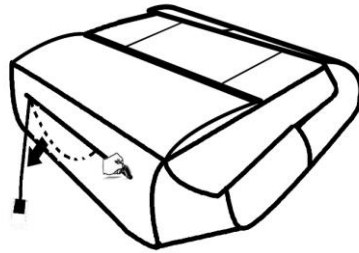


Pull the cables through the back of the sofa as shown above.

 STEP 3

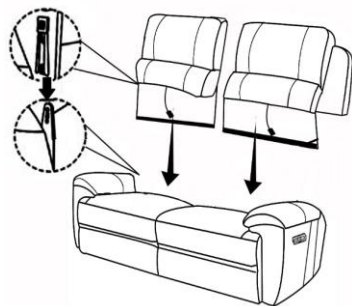


When fitting sofa backs ensure the connecting clips are aligned and then (with a person at each end) lower the back section into the base applying firm pressure until you hear a 'click' and the back is secure.

 STEP 4

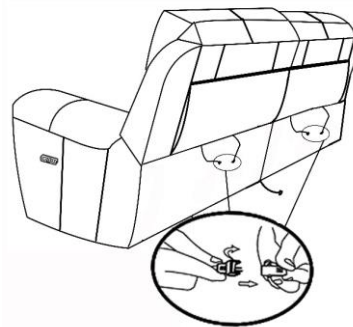


Connect both leads labelled 'headrest' together securing with attached clip.

 STEP 5

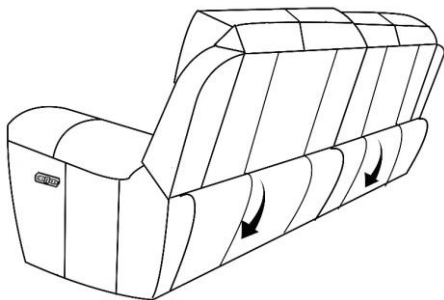


Attach the leather cover at the back to the velcro strip to secure.

 STEP 6

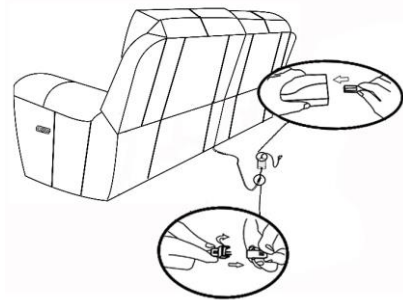


Connect the cables from the sofa into the transformer provided and plug into a standard mains socket.

 STEP 7

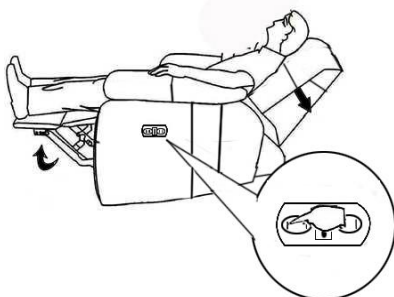


Press the front of the first button to recline your furniture.

 STEP 8

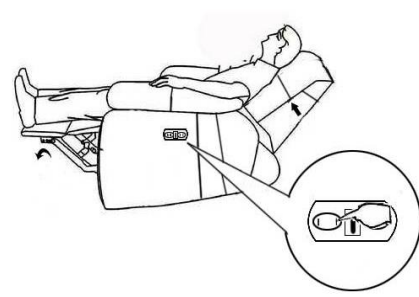


Press the rear of the first button to return to the upright position.

 STEP 9

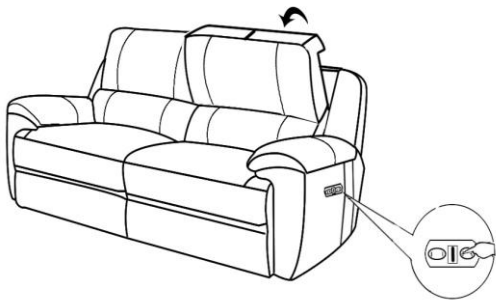


Press the front of the second button to press the headrest forward.

 STEP 10

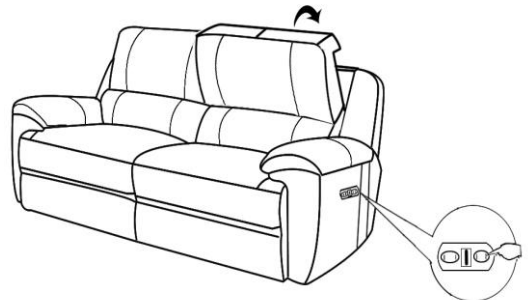

 Press the rear of the second button to return the headrest to the upright position.

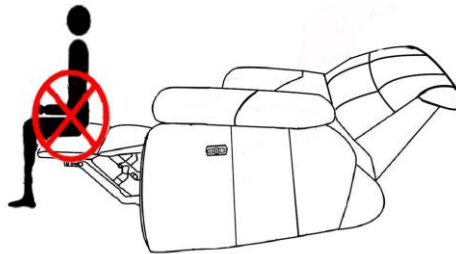


Please do not sit on the foot rest!

*Failure to correctly assemble your furniture may affect your warranty



ASSEMBLY INSTRUCTIONS

 **FINLEY
3 SEATER ELECTRIC
RECLINER SOFA**

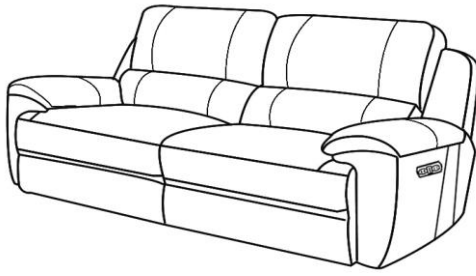


Finley Power Motion Sofa

Please follow these instructions carefully in order to ensure your new sofa is assembled in the correct manner.

Please do not use a sharp implement when unpacking your furniture as this may damage the leather.


Please note that any creases in the leather are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

 STEP 1

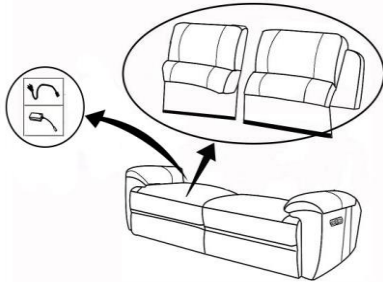


Remove the sofa back main cushions (x2) and transformer from the sofa.

 STEP 2

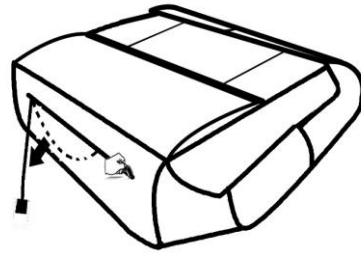


Pull the cables through the back of the sofa as shown above.

 STEP 3

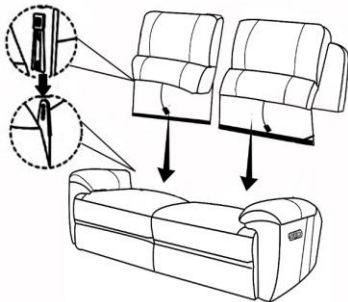


When fitting sofa backs ensure the connecting clips are aligned and then (with a person at each end) lower the back section into the base applying firm pressure until you hear a 'click' and the back is secure.

 STEP 4

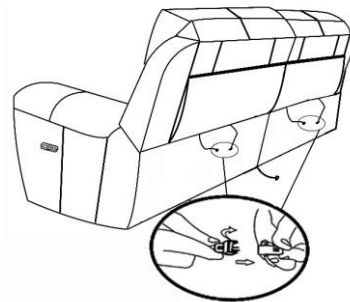


Connect both leads labelled 'headrest' together securing with attached clip.

 STEP 5

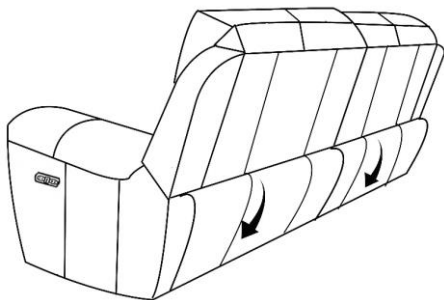


Attach the leather cover at the back to the velcro strip to secure.

 STEP 6

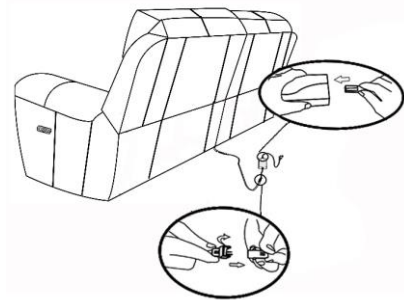


Connect the cables from the sofa into the transformer provided and plug into a standard mains socket.

 STEP 7

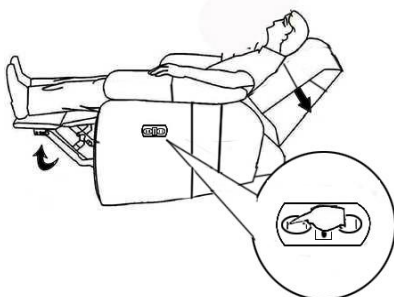


Press the front of the first button to recline your furniture.

 STEP 8

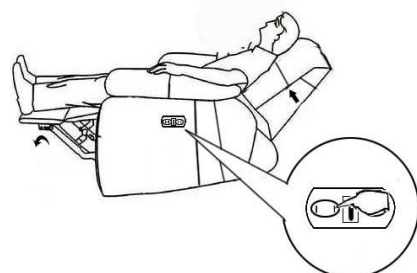


Press the rear of the first button to return to the upright position.

 STEP 9

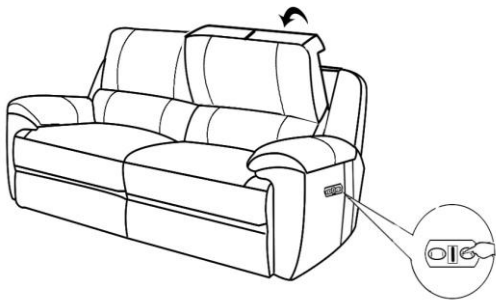

Press the front of the second button to press the headrest forward.

 STEP 10

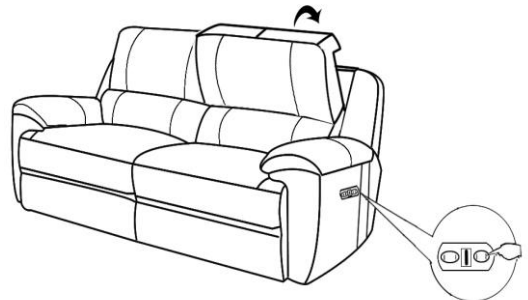

Press the rear of the second button to return the headrest to the upright position.



Please do not sit on the foot rest!

*Failure to correctly assemble your furniture may affect your warranty