


GOODWOOD FABRIC
ELECTRIC RECLINER
ARMCHAIR



Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.


Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1

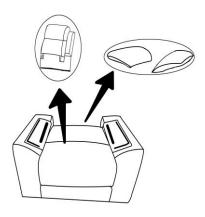


Remove the back cushion and arm pads from the chair, as shown above.

STEP 2

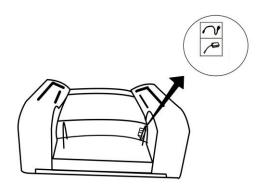


Remove the bag of electrics from the connecting clip on the back of the chair.

STEP 3

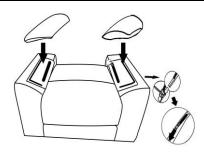


Remove the protective backing cloth from the Velcro strips, position the arms using the Velcro to secure in place and attach with the zip, as shown above.

STEP 4

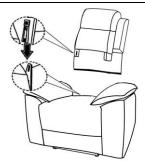


When fitting sofa backs ensure the connecting clips are aligned and then lower the back section into the base applying firm pressure until you hear a 'click' and the back is secure.

STEP 5

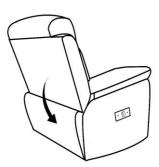

Attach the back cover to the velcro strip at the bottom to secure.


STEP 6

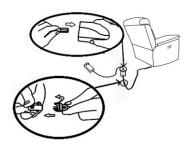

Connect the power as shown above.

Press the front button to recline your furniture.

STEP 8

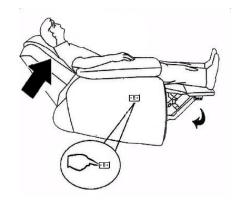

Press the rear button to return to the upright position.

STEP 9



Please do not sit on the foot rest!

STEP 10




Please do not sit on the arm rest!



GOODWOOD FABRIC

2 SEATER ELECTRIC


RECLINER SOFA

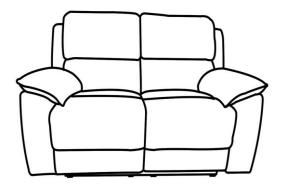

Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.


Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1

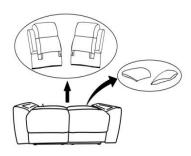


Remove the back cushions and arm pads from the sofa, as pictured above.

STEP 2

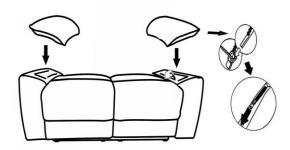


Remove the protective backing cloth from the Velcro strips, position the arms using the Velcro to secure in place and to attach with the zip as shown.

 STEP 3




Remove the bag of electrics from the connecting clip on the back of the sofa.

STEP 4

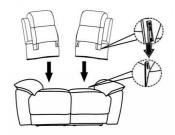


When fitting sofa backs ensure the connecting clips are aligned and then lower the back section into the base applying firm pressure until you hear a 'click' and the back is secure.

STEP 5

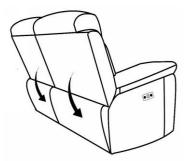


Attach the back cover to the velcro strip at the bottom to secure.

STEP 6

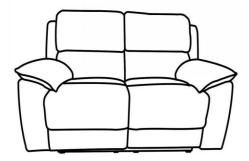


Your sofa should now be fully assembled.

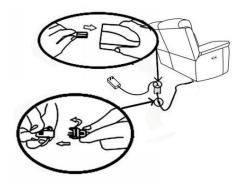


Connect the cables from the sofa into the transformers provided and plug into a standard mains socket as diagram above.

STEP 8

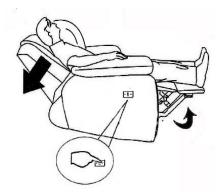

Press the front button to recline your furniture.

STEP 9

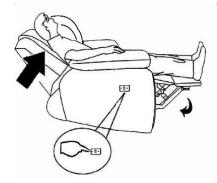

Press the rear button to return to the upright position.

STEP 10



Please do not sit on the foot rest!



GOODWOOD FABRIC

3 SEATER ELECTRIC


RECLINER SOFA



Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.


Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1

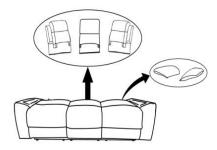


Remove the cushions and arm pads from the sofa as pictured above.

 STEP 2




Remove the protective backing cloth from the Velcro strips, position the arms using the Velcro to secure in place and attach with the zip as shown.

 STEP 3



Remove the bag of electrics from the connecting clip on the back of the sofa.

STEP 4

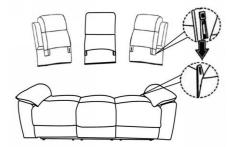

When fitting sofa backs ensure the connecting clips are aligned and then lower the back section into the base applying firm pressure until you hear a 'click' and the back is secure.

STEP 5



Attach the back cover to the velcro strip at the bottom to secure.


STEP 6



Your sofa should now be fully assembled.


Connect the cables from the sofa into the transformers provided and plug into a standard mains socket as diagram above.

STEP 8

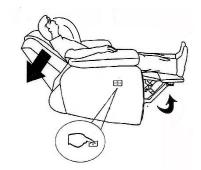

Press the front button to recline your furniture.

STEP 9

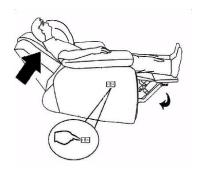

Press the rear button to return to the upright position.

STEP 10



Please do not sit on the foot rest!




GOODWOOD LEATHER ELECTRIC RECLINER ARMCHAIR



Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.


Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1

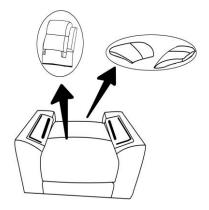


Remove the back cushion and arm pads from the chair, as shown above.

STEP 2

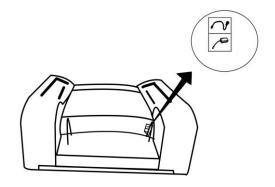

Remove the bag of electrics from the connecting clip on the back of the chair.

STEP 3

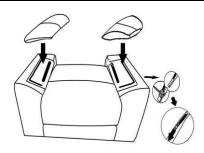


Remove the protective backing cloth from the Velcro strips, position the arms using the Velcro to secure in place and attach with the zip, as shown above.

STEP 4




When fitting sofa backs ensure the connecting clips are aligned and then lower the back section into the base applying firm pressure until you hear a 'click' and the back is secure.

STEP 5

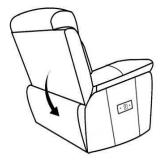

Attach the back cover to the velcro strip at the bottom to secure.


STEP 6

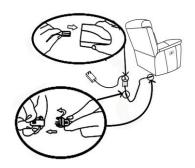

Connect the power as shown above.

Press the front button to recline your furniture.

STEP 8

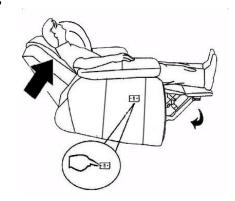

Press the rear button to return to the upright position.

STEP 9



Please do not sit on the foot rest!


STEP 10



Please do not sit on the arm rest!




GOODWOOD LEATHER 2 SEATER ELECTRIC RECLINER SOFA

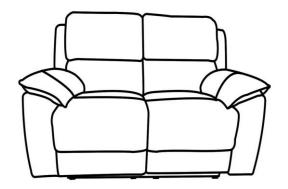

Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.


Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1

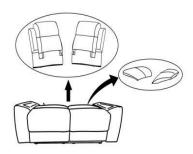


Remove the back cushions and arm pads from the sofa, as pictured above.

STEP 2

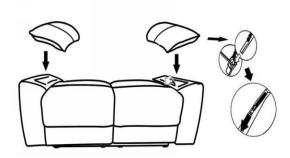


Remove the protective backing cloth from the Velcro strips, position the arms using the Velcro to secure in place and to attach with the zip.

 STEP 3




Remove the bag of electrics from the connecting clip on the back of the sofa.

STEP 4

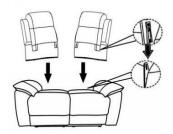


When fitting sofa backs ensure the connecting clips are aligned and then lower the back section into the base applying firm pressure until you hear a 'click' and the back is secure.

STEP 5

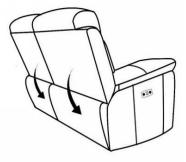


Attach the back cover to the velcro strip at the bottom to secure.

STEP 6

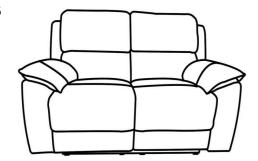


Your sofa should now be fully assembled.

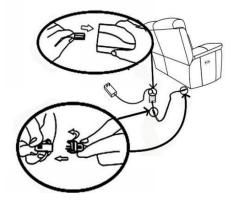


Connect the cables from the sofa into the transformers provided and plug into a standard mains socket, as diagram above.

STEP 8

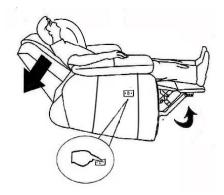


Press the front button to recline your furniture.

STEP 9

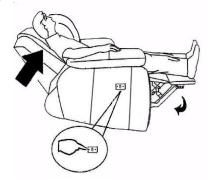

Press the rear button to return to the upright position.

STEP 10

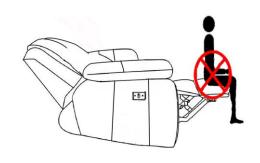


Please do not sit on the foot rest!



GOODWOOD LEATHER


3 SEATER ELECTRIC
RECLINER SOFA

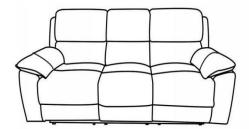

Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.


Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1

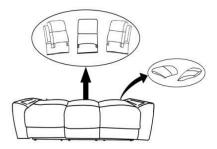


Remove the cushions and arm pads from the sofa, as pictured above.

STEP 2

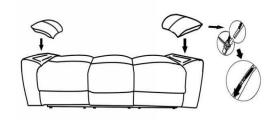


Remove the protective backing cloth from the Velcro strips, position the arms using the Velcro to secure in place and attach with the zip as shown.

 STEP 3




Remove the bag of electrics from the connecting clip on the back of the sofa.

STEP 4

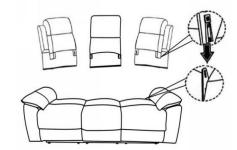


When fitting sofa backs ensure the connecting clips are aligned and then lower the back section into the base applying firm pressure until you hear a 'click' and the back is secure.

STEP 5

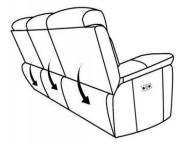

Attach the back cover to the velcro strip at the bottom to secure.

STEP 6

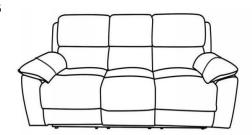

Your sofa should now be fully assembled.


Connect the cables from the sofa into the transformers provided and plug into a standard mains socket as diagram above.

STEP 8



Press the front button to recline your furniture.

STEP 9

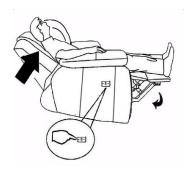

Press the rear button to return to the upright position.

STEP 10




Please do not sit on the foot rest!



GOODWOOD

MODULAR CORNER SOFA

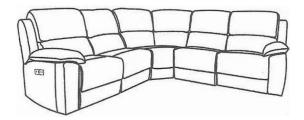

Please do not use a sharp implement when unpacking your furniture as this may damage the fabric.

Please note that any creases in the fabric are as a result of the packaging and are perfectly normal. These will diminish over the first few weeks of use at room temperature.

STEP 1



Image of the Corner Section of the Goodwood Sofa.

STEP 2




Image of the armless Section of the Goodwood Sofa.

STEP 3




Image of the second armless Section of the Goodwood Sofa.

STEP 4

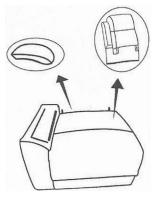


Remove the back cushion and arm pad from the left arm section of the sofa, as shown above.

STEP 5

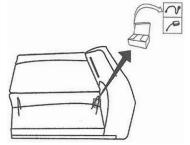


Remove the box of electrics from the connecting clip on the back of the arm section piece.

STEP 6

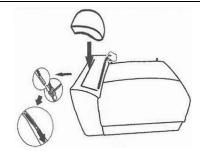


Remove the protective backing cloth from the Velcro strips, position the arms using the Velcro to secure in place and then attach with the zip, as shown above.

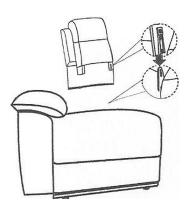


When fitting sofa backs ensure the connecting clips are aligned and then lower the back section into the base applying firm pressure until you hear a 'click' and the back is secure.

STEP 8

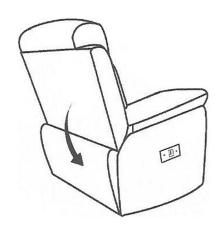

Attach the back cover to the velcro strip at the bottom to secure.

STEP 9

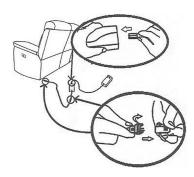

Connect the power as shown.

STEP 10



Your fully assembled arm section, should now look like this.

STEP 11


Repeat the above process to assemble the Right arm section of the Goodwood sofa.

STEP 12




Connect the sofa parts as shown in the diagram above.

STEP 13

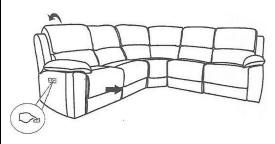

Press the front button to recline your furniture.

STEP 14

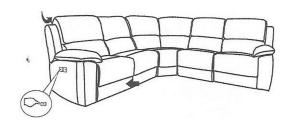

Press the back button to return to the upright position.

