



ASSEMBLY INSTRUCTIONS




**WITNEY
ARMCHAIR**

WITNEY OFL – 3 SEATER – 2 SEATER

- CHAIR

OAK EFFECT

Please note this should be carried out by 2 people!

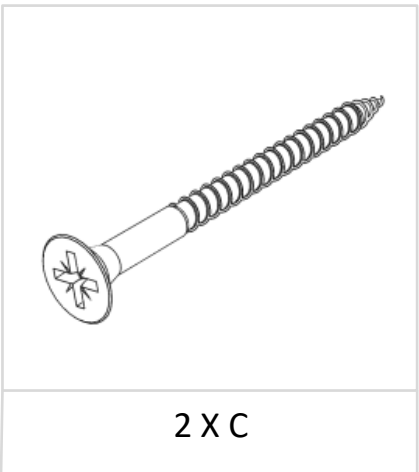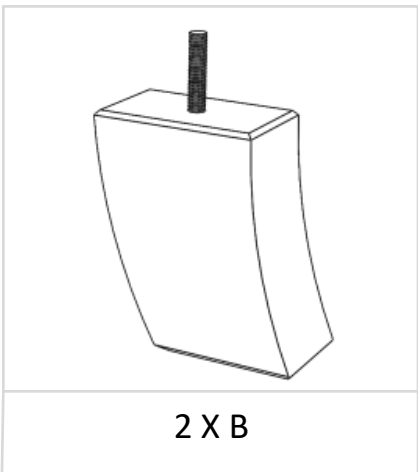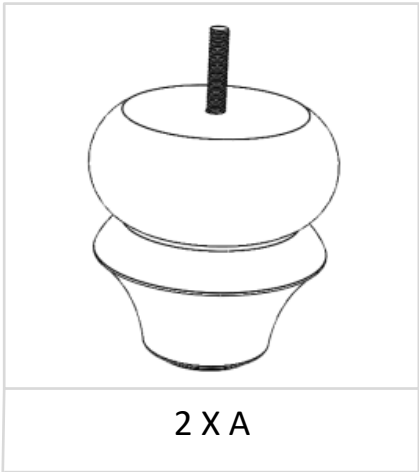

Each foot (B) requires one screw (C)



Figure 1


PLEASE TURN OVER

WITNEY OFL – 3 SEATER – 2 SEATER - CHAIR

Please note this should be carried out by 2 people!


PLEASE FOLLOW THE STEPS BELOW FOR ATTACHING YOUR FEET

1

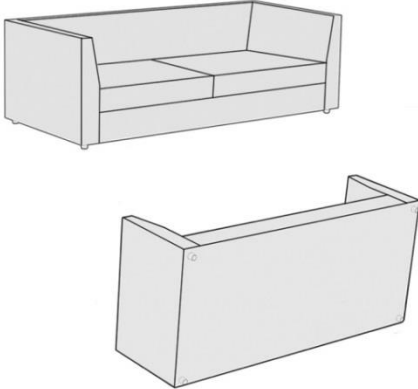


Gently turn your product onto its back or upside down.

2

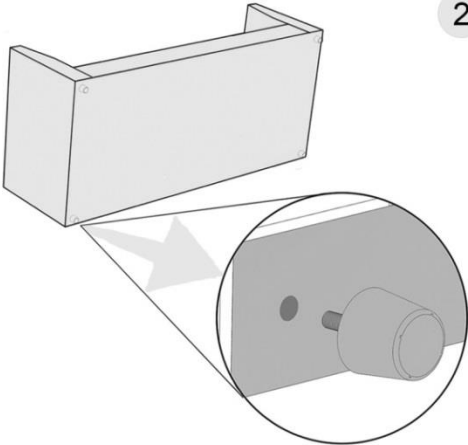


Remove the travel glides from each corner.

3

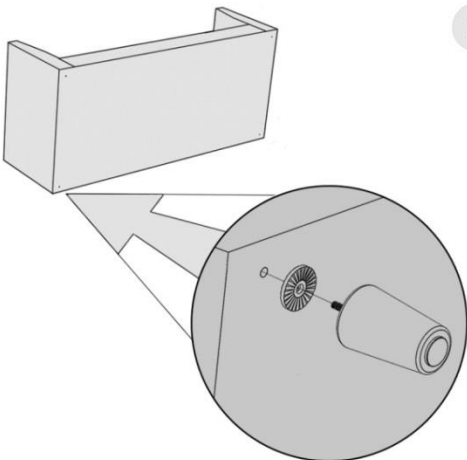


Attach the correct foot and washer quantity in accordance to the foot placement diagram (figure 1)

4

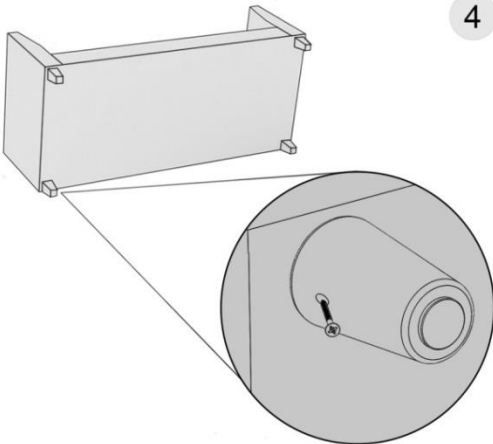

— IF your foot is provided with 38MM or 45MM attaching screws please screw them in now.

5

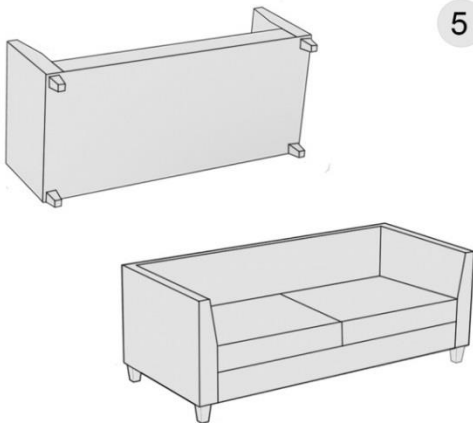

Gently turn your product back upright taking care not to knock the feet.

PLEASE NOTE IF YOU HAVE A WOODEN OR LAMINATE FLOOR, WE WOULD ADVISE YOU TO TAKE STEPS TO PROTECT YOUR FLOOR FROM POTENTIAL SCRATCHES AND MARKS. THE EASIEST WAY IS TO PLACE PROTECTIVE PADS UNDER THE FEET OF YOUR UPHOLSTERY TO PREVENT MARKS BEING MADE OR PLACE THE UPHOLSTERY ON TOP OF A PROTECTIVE COVER. THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGE SUBSEQUENTLY CAUSED TO YOUR FLOORING BY NOT TAKING THE RECOMMENDED PREVENTATIVE MEASURES

PLEASE TURN OVER



ASSEMBLY INSTRUCTIONS




**WITNEY
2 SEATER SOFA**

WITNEY OFL – 3 SEATER – 2 SEATER

- CHAIR

OAK EFFECT

Please note this should be carried out by 2 people!

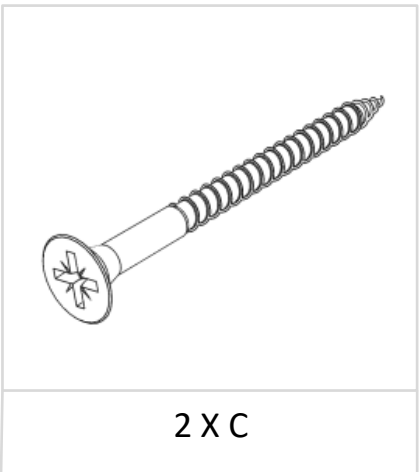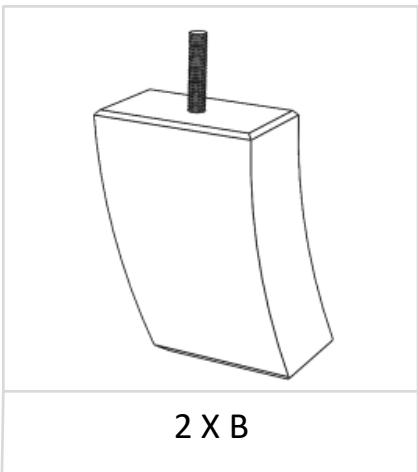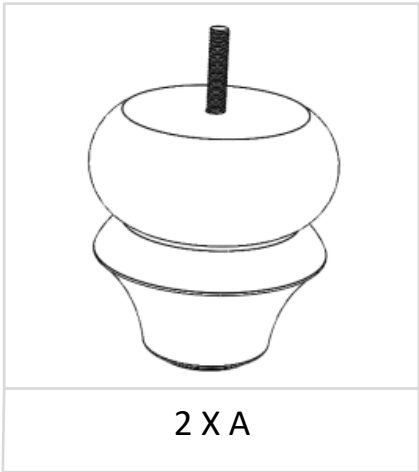

Each foot (B) requires one screw (C)



Figure 1


PLEASE TURN OVER

WITNEY OFL – 3 SEATER – 2 SEATER - CHAIR

Please note this should be carried out by 2 people!


PLEASE FOLLOW THE STEPS BELOW FOR ATTACHING YOUR FEET

1

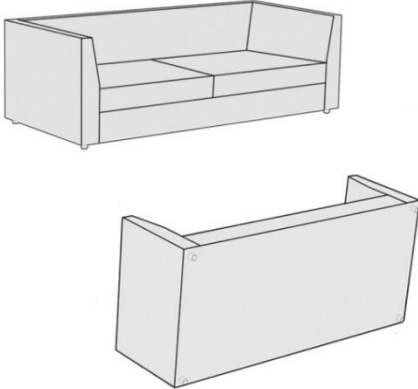


Gently turn your product onto its back or upside down.

2

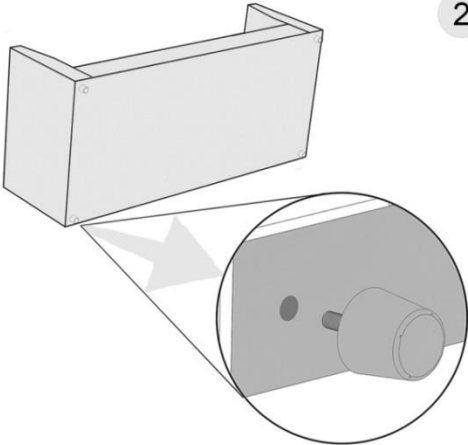


Remove the travel glides from each corner.

3

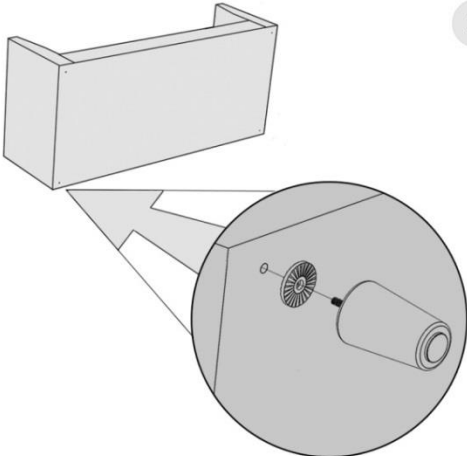


Attach the correct foot and washer quantity in accordance to the foot placement diagram (figure 1)

4

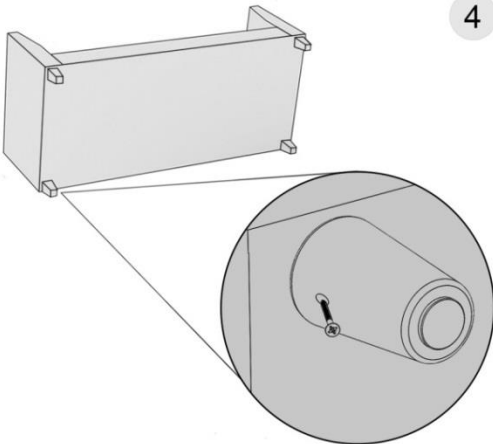

— IF your foot is provided with 38MM or 45MM attaching screws please screw them in now.

5

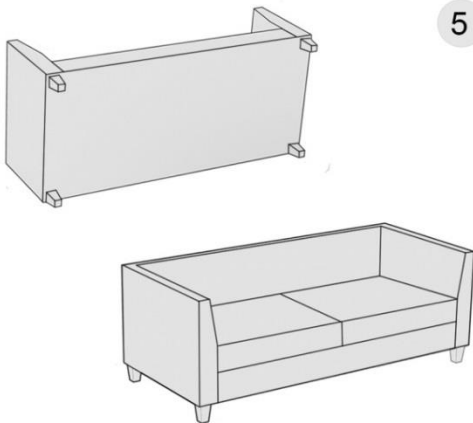

Gently turn your product back upright taking care not to knock the feet.

PLEASE NOTE IF YOU HAVE A WOODEN OR LAMINATE FLOOR, WE WOULD ADVISE YOU TO TAKE STEPS TO PROTECT YOUR FLOOR FROM POTENTIAL SCRATCHES AND MARKS. THE EASIEST WAY IS TO PLACE PROTECTIVE PADS UNDER THE FEET OF YOUR UPHOLSTERY TO PREVENT MARKS BEING MADE OR PLACE THE UPHOLSTERY ON TOP OF A PROTECTIVE COVER. THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGE SUBSEQUENTLY CAUSED TO YOUR FLOORING BY NOT TAKING THE RECOMMENDED PREVENTATIVE MEASURES

PLEASE TURN OVER



ASSEMBLY INSTRUCTIONS




**WITNEY
3 SEATER SOFA**

WITNEY OFL – 3 SEATER – 2 SEATER

- CHAIR

OAK EFFECT

Please note this should be carried out by 2 people!

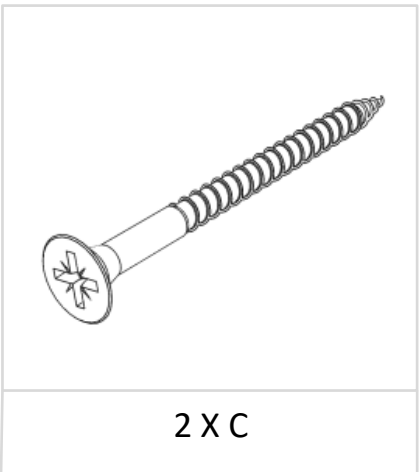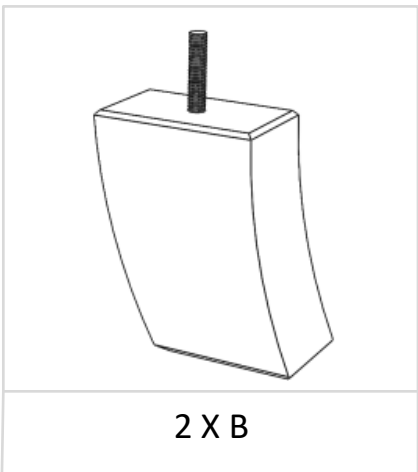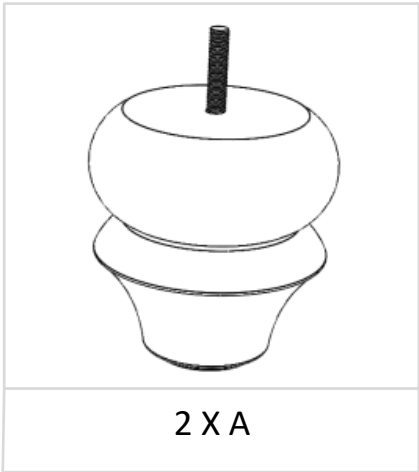

Each foot (B) requires one screw (C)



Figure 1


PLEASE TURN OVER

WITNEY OFL – 3 SEATER – 2 SEATER - CHAIR

Please note this should be carried out by 2 people!


PLEASE FOLLOW THE STEPS BELOW FOR ATTACHING YOUR FEET

1

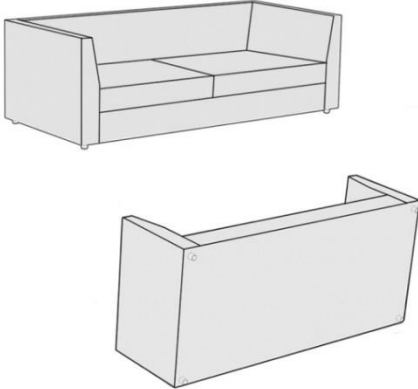


Gently turn your product onto its back or upside down.

2

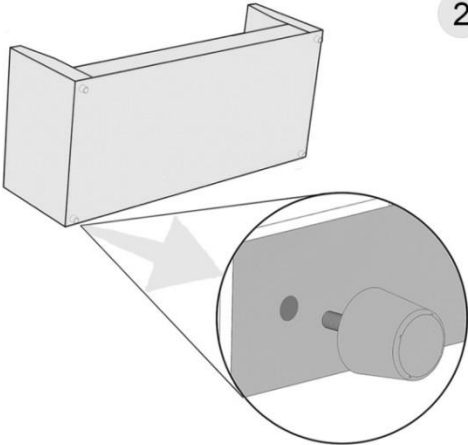


Remove the travel glides from each corner.

3

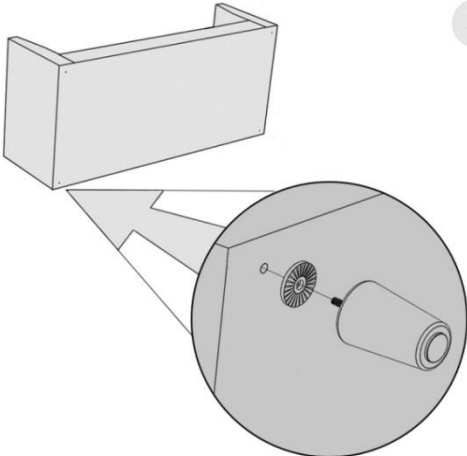


Attach the correct foot and washer quantity in accordance to the foot placement diagram (figure 1)

4

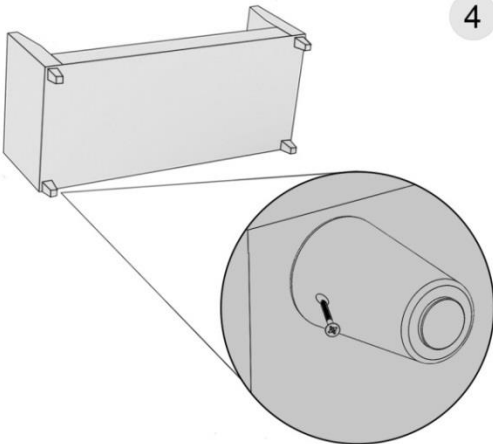

— IF your foot is provided with 38MM or 45MM attaching screws please screw them in now.

5

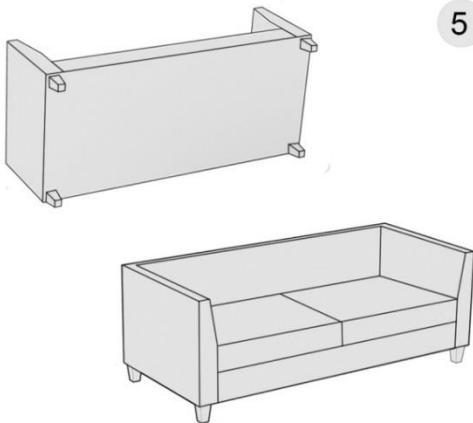

Gently turn your product back upright taking care not to knock the feet.

PLEASE NOTE IF YOU HAVE A WOODEN OR LAMINATE FLOOR, WE WOULD ADVISE YOU TO TAKE STEPS TO PROTECT YOUR FLOOR FROM POTENTIAL SCRATCHES AND MARKS. THE EASIEST WAY IS TO PLACE PROTECTIVE PADS UNDER THE FEET OF YOUR UPHOLSTERY TO PREVENT MARKS BEING MADE OR PLACE THE UPHOLSTERY ON TOP OF A PROTECTIVE COVER. THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGE SUBSEQUENTLY CAUSED TO YOUR FLOORING BY NOT TAKING THE RECOMMENDED PREVENTATIVE MEASURES

PLEASE TURN OVER



ASSEMBLY INSTRUCTIONS

**WITNEY
STORAGE FOOTSTOOL**

WITNEY OFL – Storage Stool

OAK EFFECT

Please note this should be carried out by 2 people!

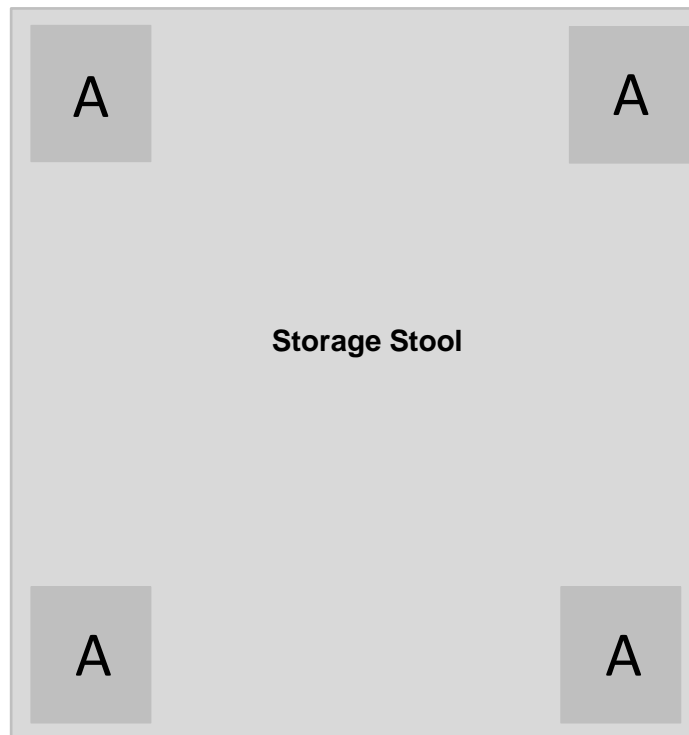



Figure 1

PLEASE TURN OVER

WITNEY OFL – Storage Stool

Please note this should be carried out by 2 people!

PLEASE FOLLOW THE STEPS BELOW FOR ATTACHING YOUR FEET

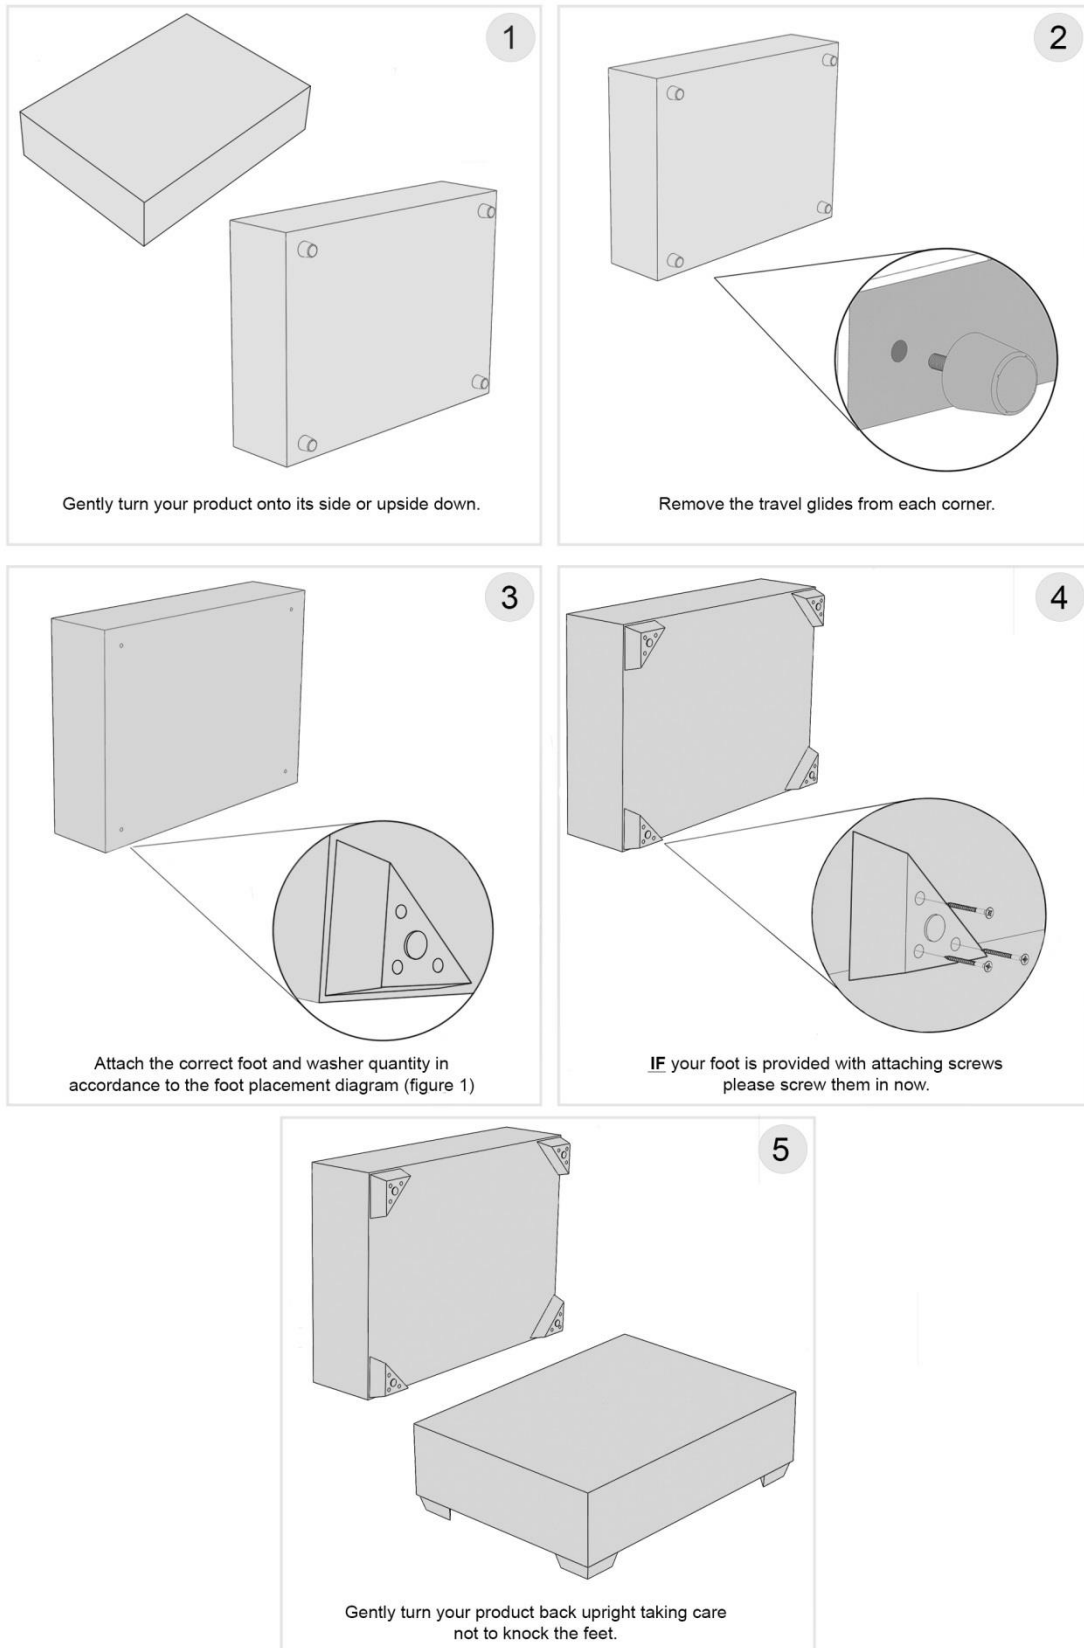

PLEASE NOTE IF YOU HAVE A WOODEN OR LAMINATE FLOOR, WE WOULD ADVISE YOU TO TAKE STEPS TO PROTECT YOUR FLOOR FROM POTENTIAL SCRATCHES AND MARKS. THE EASIEST WAY IS TO PLACE PROTECTIVE PADS UNDER THE FEET OF YOUR UPHOLSTERY TO PREVENT MARKS BEING MADE OR PLACE THE UPHOLSTERY ON TOP OF A PROTECTIVE COVER. THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGE SUBSEQUENTLY CAUSED TO YOUR FLOORING BY NOT TAKING THE RECOMMENDED PREVENTATIVE MEASURES

PLEASE TURN OVER